DECREASE TENSION if load cannot easily be pulled down to desired height.

- 1. If reel is so equipped, turn ratchet lock to "OFF" (knob is located on side of reel).
- 2. Place wrench on flats of shaft.
- 3. Hold shaft firmly with wrench. Depress spring on opposite side of reel.
- 4. Allow shaft to turn SLOWLY in clockwise direction until desired tension is achieved. If shaft will not turn in clockwise direction UNASSISTED, reel is at minimum tension and further tension reduction should not be attempted.

A DANGER

DO NOT allow spring to unwind in an uncontrolled manner. Doing so can result in damage to reel or personal injury.

RATCHET LOCK USE

If reel is equipped with ratchet lock ("-L" models), engage by pulling cable out to desired position and letting it retract SLOWLY until lock engages. To release lock, quickly pull cable out a short distance and allow it to begin to retract-it operates like a window shade. Ratchet lock may be disengaged by turning knob on side of reel.

SERVICE

REGULAR MAINTENANCE

- 1. Reel is factory lubricated for life. No additional lubrication is required.
- 2. Periodically check cable for wear. If wear is detected, cable should be replaced immediately. If cable replacement is required, order cable Assembly, Kit No. 5, which contains cable and related parts, hardware and instructions. See Parts List (inside) for details.

SPRING REPLACEMENT

Spring motors are self-contained for safe and easy handling. If spring motor replacement is required, it should be replaced as a unit by ordering Spring Motor Assembly, Kit No. 1, which contains the spring motor, spool, shaft & bushings in a sealed canister. See Parts List (inside) for details.



DO NOT attempt to remove spring motor from its canister. Doing so can result in damage to reel or personal injury.

RATCHET LOCK REPLACEMENT

For your convenience, the ratchet lock assembly has been included in two separate replacement kits. Order either the Hardware Package, Kit No. 7, or the RH Housing Assembly, Kit No. 2. See Parts List (inside) for details.



Workplace Solutions

Gleason Reel Corp.

600 South Clark St. Mayville, WI 53050 Phone: 920-387-4120 www.hubbell.com/gleasonreel/en

Bulletin No. 624010.j

INSTALLATION & MAINTENANCE INSTRUCTIONS

Series BG Tool Balancers

INSTALLATION

NOTE: To minimize wear on cable and cable quide, reel should be mounted directly over work area and, preferably, on a rolling trolley so that cable is pulled out as straight as possible during use. All tools and electric cable or hose anchor points on the balance reel cable

MUST be at least 6-inches below the ball stop!

MOUNT REEL

- 1. Use clevis to hang reel in desired location. Be sure cotter pin is installed on clevis pin.
- 2. Attach optional safety chain to secondary hanger bracket or other overhead support. Do not use the same attachment point as used for the clevis. See Figure 1.



A CAUTION

To prevent reel fall should primary clevis mount fail, it is recommended that a safety chain be used from reel to a secure secondary support. Failure to use safety chain could result in personal injury.

ATTACHING LOAD

For most effective use of reel, tool (Figure 2) should be positioned at top of working range with no cable pulled off reel. Use overhang cables to achieve proper distance from reel to tool. Cable on reel should be used only to move tool within working range. To attach load (all components hung on reel), raise load to safety clip and attach. DO NOT pull cable down to load.




CAUTION


Always raise load to safety clip on cable reel. DO NOT pull reel cable down to load. Doing so can result in damage to reel or personal injury.

TENSION ADJUSTMENT

INCREASE TENSION if reel will not completely rewind cable with load attached until cable stop reaches quide.


- 1. Allow cable to retract as far as possible.
- 2. Place wrench on flats of shaft. Turn shaft counter-clockwise until cable stop reaches guide.



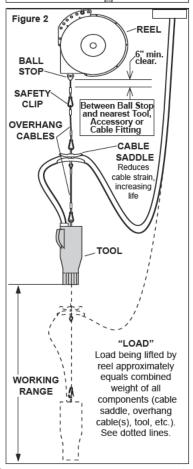

BALANCE REEL ILLUSTRATED PARTS LIST

Replacement parts available as kits only.

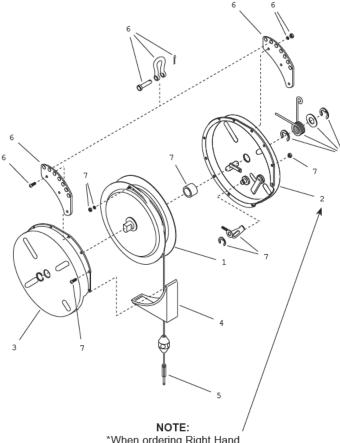

*When ordering Right Hand Housing Assembly (REF NO. 2) for LOCKING MODELS, you must add "-L" to the kit number.

EXAMPLE: BG07-K02-L

Ratchet lock assembly will ship attached to housing half.

Housing half only is supplied if "–L" is not added to model number.

BG BALANCE REEL REPLACEMENT PARTS KITS

	BG BALANCER SERIES						
REF. NO.	BG03	BG07	BG10	BG15	BG20	BG25	KIT DESCRIPTION
	KIT NUMBER						
1	BG07-K01	BG07-K01	BG07-K01	BG15-K01	BG20-K01	BG25-K01	SPRING MOTOR ASSY: Spring Motor, Spool, Shaft & Bushings in sealed canister
2	BG07-K02*	BG07-K02*	BG07-K02*	BG07-K02*	BG07-K02*	BG07-K02*	RH HOUSING ASSY: RH Housing Half, Ratchet Lock ASSY (Ratchet lock ASSY on "-L" models only. Add -L to kit number)*
3	BG03-K03	BG07-K03	BG10-K03	BG15-K03	BG20-K03	BG25-K03	LH HOUSING ASSY: LH Housing Half, Nameplate
4	BG07-K04	BG07-K04	BG07-K04	BG07-K04	BG07-K04	BG07-K04	CABLE GUIDE
5	BG07-K05	BG07-K05	BG07-K05	BG07-K05	BG07-K05	BG07-K05	CABLE ASSY: Cable, Safety Clip, Lockwasher–M4, Hex Nut–M4
6	BG07-K06	BG07-K06	BG07-K06	BG07-K06	BG07-K06	BG07-K06	HANGING BRACKET ASSY: Hanging Bracket, Clevis, Clevis Pin, Cotter Pin, Slotted Machine Screw M14 x 14mm (3), Lockwasher-M4 (3),Hex Nut-M4 (3)
7	BG07-K07	BG07-K07	BG07-K07	BG07-K07	BG07-K07	BG07-K07	HARDWARE PACKAGE: Spacer, Torsion Spring, Slotted Machine Screw M4 x 14mm (3), Slotted Machine Screw M4 x 8mm (6), Lockwasher-M4 (10), Hex Nut-M4 (10), Retaining Ring (3), Shim, Extension Spring, and Ratchet Lock Assembly

GleasonReelDirect.com

Premier Suppliers of Genuine Gleason Reel Products - Factory Authorized



Zampini Industrial Group

Trusted Industrial Suppliers Since 1986 85 Industrial Circle, Suite 2211 Lincoln, RI 02865 USA

Factory Authorized Gleason Reel Suppliers FAST Quotes, FAST Delivery!





Contact Us For Your Gleason Reel Products and Parts Today!







1-800-353-4676 1-401-305-7997

1-401-305-7988





